


Quick Start Guide

SPR-210D

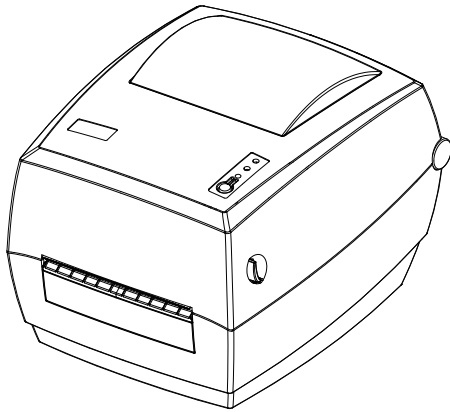


Caution:
This is a Class A product. In a domestic environment this product may cause radio interference in which the user may be required to take adequate measures.


Importer: Setsis Bilisim teknolojileri

ADD: Kaptanpasa Mah. Halit Ziya Turkkan Sok. Famas Plaza C Blok No: 19 Sisli Istanbul


Packing List

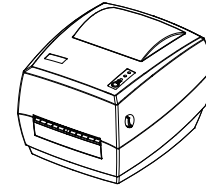

Printer

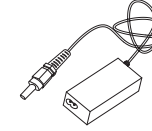


AC Adapter

 


Power Cord



 USB Cable



Quick Start Guide

 


CD

⚠ Note: The packing materials are actually based on the order.

Appearance and Components


■ Front View

(Status Indicator)
Feed Button

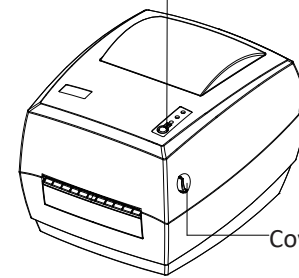

Cover Open Levers

■ Rear View

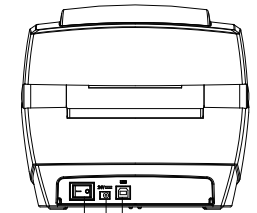


Power Switch

Power Receptacle


USB Port

⚠ Note: The views above are for your reference. Ports vary by your choice.

■ Inside View


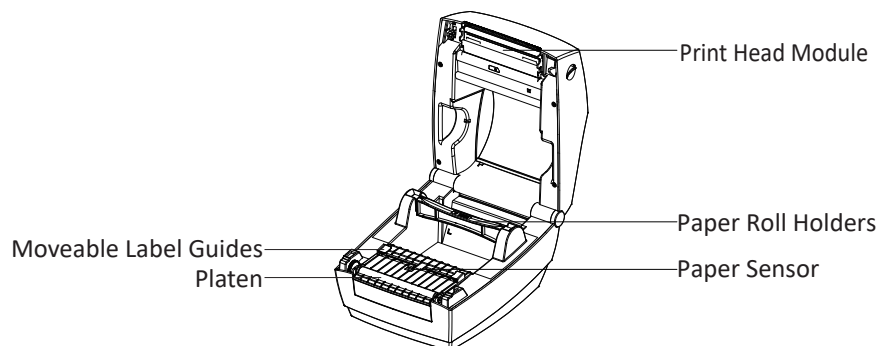


5. Pull some paper and pass it through paper guides, adjust paper guides according to the paper width.
6. Press down the top cover until it closes.

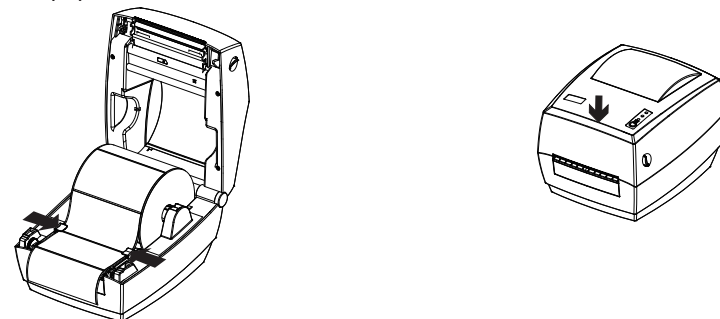


Loading the Roll

1. Press the left and right cover open lever with hands simultaneously and lift the printer cover.
2. Hold the paper roll shaft and take it out.

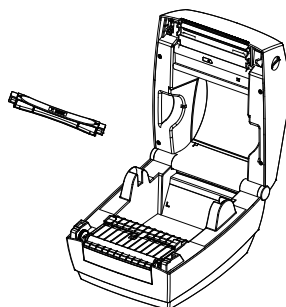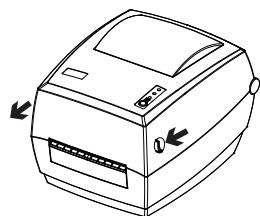


3. Load the paper roll in the shaft.

 
- 1 Paper roll shaft loading
1 inches




- 2 Paper roll shaft loading
1.5 inches

 


4. Then load the paper module from the top down to printer.

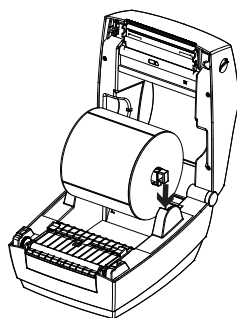

USB Connection

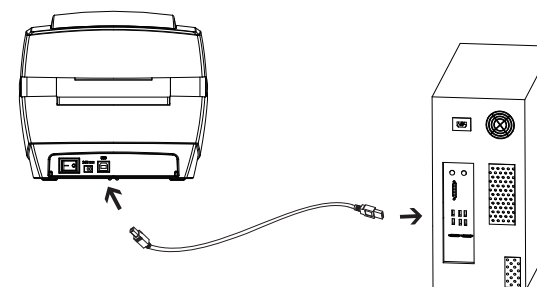

Power Connection

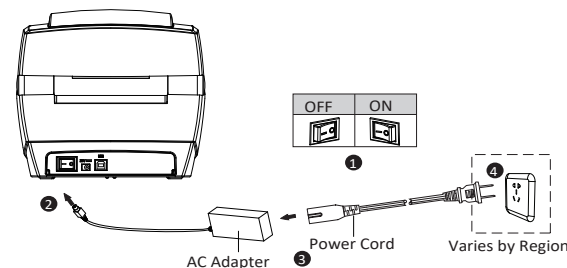

1. Make sure the printer is "OFF"
2. Connect the AC adapter to printer.
3. Connect the power cord to AC adapter.
4. Connect the other side of power cord to the socket outlet.

⚠ Note: tool and driver installation please refer to SPR-210D User Manual.